



# Wacky Wire Rental Instructions

## Equipment Needed:

1+ Wacky Wire Unit

## Set Up Instructions:

1. Find chrome wand with grey handles and take it off the chrome corkscrew.
2. Plug game into nearest outlet, chrome corkscrew will start to revolve.
3. Insert reset pin (on yellow wire) into hole on side of unit marked "Hand Reset."
4. Let it hang loosely in reset hole.

## Operating Instructions:

1. Player takes wand and starts working from the top of corkscrew where the black cap is located.
2. While unit is rotating, CAREFULLY start wand down the corkscrew without touching the sides.
3. **WINNER** is determined by player successfully placing wand on the silver plate at the bottom of the corkscrew. Unit emits a steady beep and red light on the post stays lit.
4. **LOSING** occurs when player touches any part of the corkscrew on the way down. Unit emits a loud alternating beep, and the red light flashes.
5. To stop the **WINNER/LOSER** sound push the reset rod firmly into the "Hand Reset" hole.
6. Move the wand back up to the top for the next player.

## Returning the Wacky Wire

All parts listed below must be returned in good working condition. Any parts missing or broken will be charged at the price listed.

<b>U</b>	<b>Qty</b>	<b>Item</b>	<b>Price</b>
'	1	Wacky Wire Game Unit	\$ 400.00



[www.partylandutah.com](http://www.partylandutah.com)

*Trouble shooting hints, power requirements, and additional copies of this form may be reprinted from the above website.*